


# FRONT PILLAR UPPER COVER

## COMPONENTS

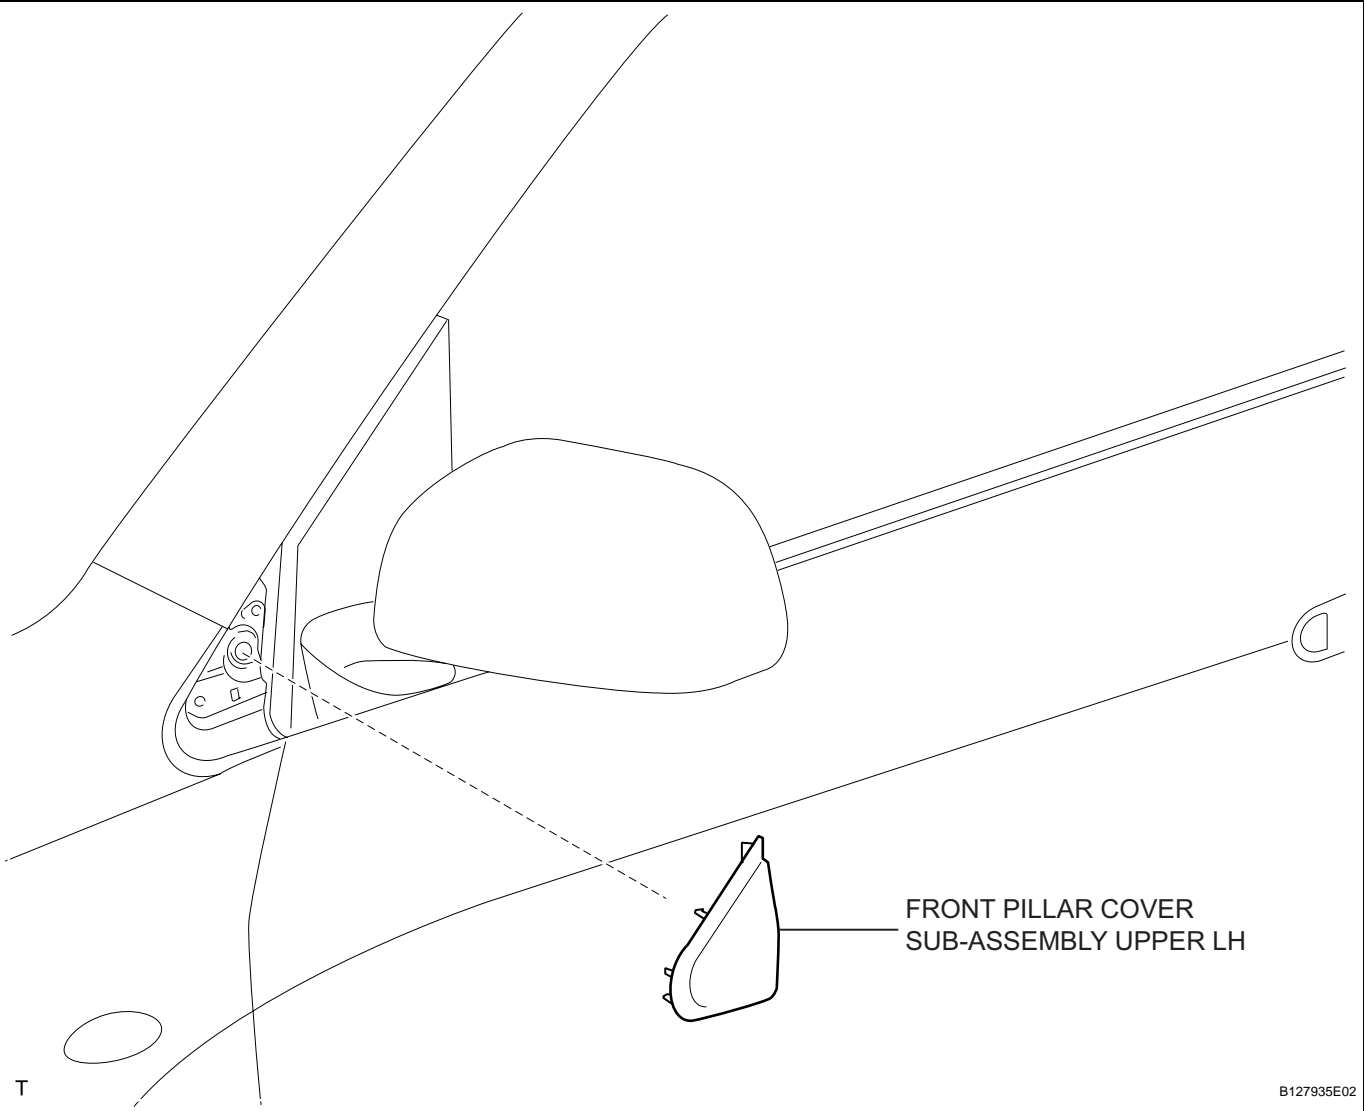


## REMOVAL

### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

### 1. REMOVE FRONT PILLAR COVER SUB-ASSEMBLY UPPER LH

- (a) Using a moulding remover, detach the 3 clips and remove the pillar cover.

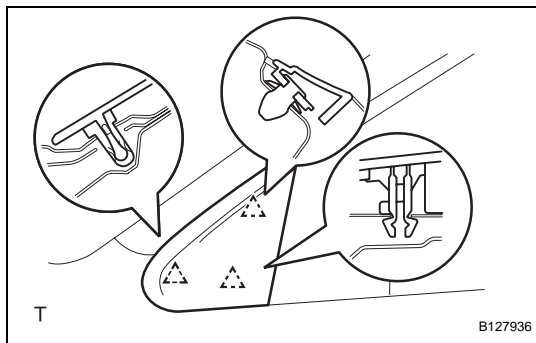

## INSTALLATION

### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

### 1. **INSTALL FRONT PILLAR COVER SUB-ASSEMBLY UPPER LH**

- (a) Attach the 3 clips to install the pillar cover.

